

## Overview

The WPR2 Series Remote Wet to Wet Differential Pressure Transmitter is designed to reduce installation time and provide mounting flexibility, often eliminating the need for additional plumbing. They accurately measure wet media pressures in a variety of applications. Commonly used for monitoring pumps, these devices are also ideal for measuring pressure across filters, heat exchangers and compressors. The dual remote sensors are based on a ceramic capacitive sensing element with 1/4"-18 NPT male (304 stainless steel) fittings. The WPR2's enclosure opens conveniently to allow it to be reconfigured between three additional ranges (see Specifications) and outputs of 4 to 20 mA, 0 to 5 VDC, or 0 to 10 VDC (default). The different configurations in this series can measure both uni or bi-directional pressure ranges as low as 3 psi and as high as 300 psi, depending on the unit. The WPR2 also features a push button auto zero function for remote calibration. The different configurations in this series can measure both uni or bi-directional pressure ranges as low as 3 psi and as high as 300 psi, depending on the unit.

The LCD option displays pressure values for both the High and Low side pressures, a differential pressure value, "OVR" for values over the specified range, "ERROR" for differential pressures out of range, and "ZERO" when the auto-zero is in process.

**Applications:** Monitoring Pumps, Compressors, Filters, Heat Exchangers, Flow



## Part Numbers

**N2-A/WPR2-30-M20-A**

**N2-A/WPR2-100-M20-A**

**N2-A/WPR2-300-M20-A**

**N2-A/WPR2-100-M20-LCD-A**

**N2-A/WPR2-300-M20-LCD-A**

**N2-A/WPR2-30-M20-LCD-A**

## Specifications

<b>Supply Voltage:</b>	<b>4-20 mA Output:</b> 18-36 VDC (250 Ohm Load max.) / 20-36 VDC (500 Ohm Load max.) / 24 VAC (+/-10%) 50/60 Hz <b>0-5 VDC / 0-10 VDC Output:</b> 16-36 VDC / 24 VAC (+/- 10%) 50/60 Hz
<b>Supply Current:</b>	<b>4-20 mA Output:</b> 24 mA minimum   <b>0-5 VDC / 0-10 VDC Outputs:</b> 6 mA minimum
<b>Output Signals:</b>	<b>2-wire:</b> Linear 4-20 mA DC Current (Field Selectable)   <b>3-wire:</b> 0-5 VDC; 0-10 VDC (Default) & 4-20 mA (Field Selectable)
<b>Response Time (0-100% FSO):</b>	8 seconds
<b>Output Update Rate:</b>	1 second
<b>Output Load Resistance:</b>	<b>4 to 20 mA:</b> 500 ohms maximum   <b>0-5 VDC / 0-10 VDC:</b> 5K ohms minimum
<b>Field Selectable Ranges:</b>	See Ordering Table
<b>Warm Up Time:</b>	15 minutes (wait 15 minutes before zeroing)
<b>Accuracy<sup>1</sup> (Three Highest Ranges):</b>	±1.0% FSO
<b>Accuracy<sup>1</sup> (Lowest Range<sup>2</sup>):</b>	±1.5% FSO
<b>Thermal Effects<sup>3</sup>:</b>	±2.0% FSO from 32-140°F (0-60°C)
<b>Operating Temperature:</b>	<b>Transducer:</b> -40 to 257°F (-40 to 125°C)   <b>Electronics/Housing/Cables:</b> 32-167°F (0-75°C)
<b>Compensated Temperature Range:</b>	32 to 140°F (0 to 60°C)
<b>Storage Temperature:</b>	-13 to 176°F (-25 to 80°C)
<b>Operating Humidity:</b>	10 to 90% RH, non-condensing
<b>Proof Pressure:</b>	<b>WPR2-30:</b> 60 PSI   <b>WPR2-100:</b> 200 PSI   <b>WPR2-300:</b> 600 PSI

Specifications subject to change without notice.

1150 Roberts Boulevard, Kennesaw, Georgia 30144

770-429-3000 Fax 770-429-3001 | www.automatedlogic.com

N2- A/WPR2 Series– 8/23/23

<b>Burst Pressure:</b>	<b>WPR2-30:</b> 300 PSI   <b>WPR2-100:</b> 1000 PSI   <b>WPR2-300:</b> 3000 PSI
<b>Media Types:</b>	Any gas or liquid compatible w/ 304L or 316L Stainless Steel
<b>Process Fitting Material:</b>	304 SS
<b>Process Fitting Size:</b>	1/4" - 18 NPT Male; Pressure Snubber included for light oils/water
<b>Recommend Torque Specification:</b>	150 lbs-in (16.95 Nm)
<b>Transducer Cable Rating   Connector Type:</b>	Type CMP - Plenum Rated (UL Standard 444), NEC Article 800   IP65 at the sensors Packard Connector
<b>Metal Clad Rating:</b>	Continuously interlocked Type 304 Stainless Steel core
<b>Enclosure Material   Flammability Rating:</b>	Flame Retardant PC   PBT Alloy   UL94V-0
<b>Enclosure Rating:</b>	NEMA 4X/IP66
<b>Approvals:</b>	CE, RoHS2, WEEE, Reach
<b>Product Dimensions (L x W x D):</b>	5.30" x 5.07" x 3.00" (13.46 cm x 12.88 cm x 7.62 cm)
<b>Product Weight:</b>	<b>A/WPR2 (0-xxx psid)-20':</b> 2.4 lbs (1.09 kg) <b>A/WPR2 (0-xxx psid)-20'-LCD:</b> 2.5 lbs (1.138 kg)

<sup>1</sup>Accuracy includes Linearity, Hysteresis, and Repeatability @ 71°F (21.5°C)

<sup>2</sup>Shift Relative to 71°F (21.5°C)

### Ordering Table

Part #	Ranges*	Outputs* (Default in Bold)	Armored Cable	20' Harness	No LCD	w/ LCD
N2-A/WPR2-30-M20	<b>Uni-Directional:</b> 0-30, 0-15, 0-7.5 and 0-3 psid	4-20 mA, 0-5 VDC, <b>0-10 VDC</b> (Default)	•	•	•	
N2-A/WPR2-30-20-LCD	<b>Bi-Directional:</b> +/-30, +/-15, +/-7.5 and +/-3 psid					
N2-A/WPR2-100-M20	<b>Uni-Directional:</b> 0-100, 0-50, 0-25 and 0-10 psid	4-20 mA, 0-5 VDC, <b>0-10 VDC</b> (Default)	•	•	•	
N2-A/WPR2-100-M20-LCD	<b>Bi-Directional:</b> +/-100, +/-50, +/-25 and +/-10 psid					
N2-A/WPR2-300-M20	<b>Uni-Directional:</b> 0-300, 0-150, 0-75 and 0-30 psid	4-20 mA, 0-5 VDC, <b>0-10 VDC</b> (Default)	•	•	•	
N2-A/WPR2-300-M20-LCD	<b>Bi-Directional:</b> +/-300, +/-150, +/-75 and +/-30 psid					

Specifications subject to change without notice.

1150 Roberts Boulevard, Kennesaw, Georgia 30144

770-429-3000 Fax 770-429-3001 | www.automatedlogic.com

**Dimensional Drawing**

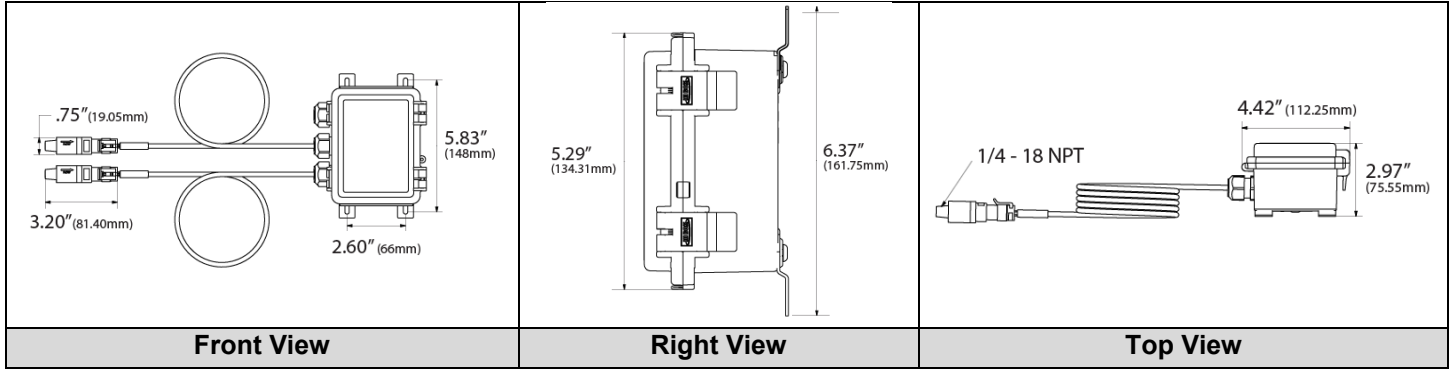




Figure 1

**Mounting Instructions**

The WPR2 is supplied with 4 mounting flanges. The mounting flanges must be installed onto the bottom of the enclosure. Align the mounting flanges with the threaded insert on the bottom of the enclosure. Insert and tighten down the screws. Find a suitable location for the enclosure. Drill pilot holes for the (4) mounting screws. Use the enclosure flange as a guide, or use the dimensions listed in FIGURE 1 to measure out.

**Wiring Instructions**

 <b>Warning</b>	<ul style="list-style-type: none"> <li>Remove power before wiring. Never connect or disconnect wiring with the power applied. Do not allow live wires to touch the circuit board.</li> </ul>
---	--

 <b>Caution</b>	<ul style="list-style-type: none"> <li>An Isolation Transformer Is Recommended When Powering The Device With 24vac.</li> <li>Do Not Run The Wiring In Any Conduit With Line Voltage.</li> <li>Failure to wire devices with the correct polarity when using a shared transformer may result in damage to any device powered by the shared transformer.</li> <li>Do not switch pressure range and output mode when power is on. Make sure to power off the unit first, then move jumpers to the right positions and then power on the transmitter.</li> <li>Do not apply any external voltage to zero terminals.</li> <li>Do not replace pressure sensors with any other sensors. Do not interchange the high and low sensors. The high and low sensors are specifically calibrated to the WPR2 unit.</li> <li>Any changes to the sensors will void the product warranty.</li> </ul>
---	--

- Open the cover of the enclosure.
- Shielded cable with 16 to 22AWG conductors is recommended. Twisted pair may be used for 2-wire current output transmitters or 3-wire for voltage output.
- Each WPR2 unit can be configured to three output modes: 4-20mA, 0-5V and 0-10V. Use the **Wiring Connections** table below to determine the proper wiring for your application. See the table below for Output Mode and Output Signal switch positions. All wiring must comply with local and National Electric Codes.
- After wiring, close the cover.

**NOTE** The WPR2 units are shipped from the factory set up with a 0-10 VDC output.

N2-A/WPR2-30-M20-A, N2-A/WPR2-100-M20-A, N2-A/WPR2-300-M20-A					
Output Signal (SW8)	Output Mode (SW7 Position 2)	Supply Voltage	Wire Connection		
Vout	0-5 VDC (5V)	VAC/VDC	V+	COM	VOUT
Vout	0-10 VDC (10V)	VAC/VDC	V+	COM	VOUT
mA	4-20 mA	VDC	V+	----	IOUT
mA	4-20mA	VAC	V+	COM	IOUT

Wiring Connections

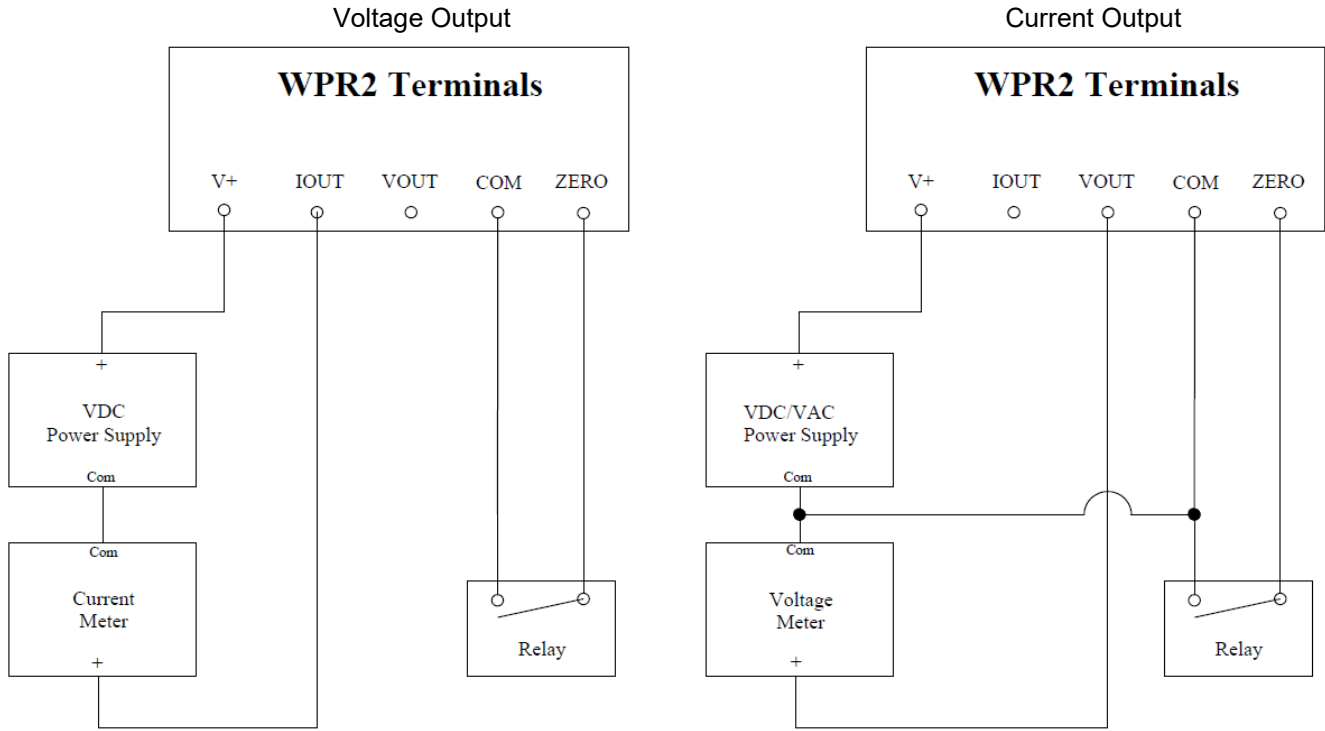


Figure 2

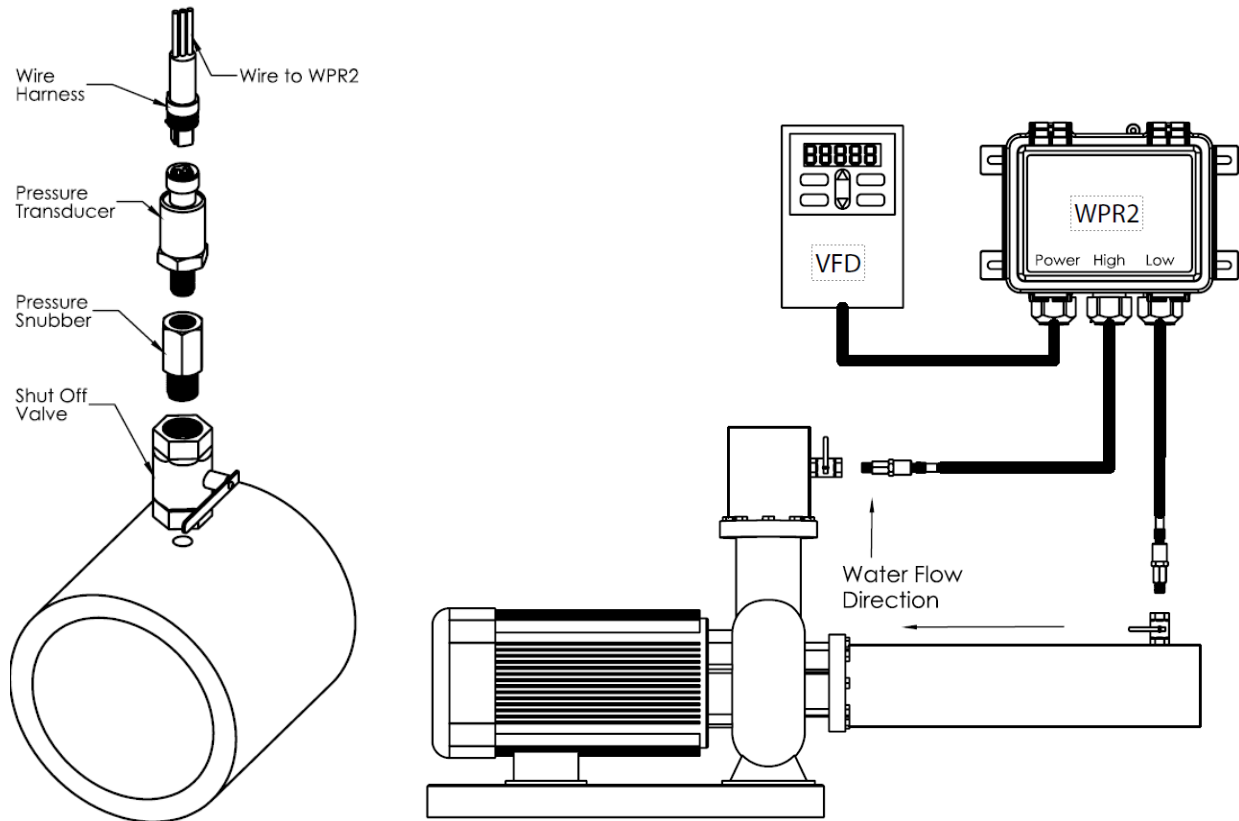


Figure 3: Sensor Installation


**Auto Zero**

The WPR2 unit should be “ZEROED” before the pressure transducers are installed on the pipes. The Auto zero button and remote zero are both used to cancel out the offsets caused by installation and sensor drift.

**NOTE** Make sure a minimum of 10 minutes of warm-up time before adjustment to the ZERO.

The Auto Zero adjustment should only be performed with NO pressure applied to both sensors.

1. Shut off your main pressure valve and open a shutoff valve with hose drain to equalize the pressure in the line to your atmosphere.
2. Remove the sensors from the system to remove pressure from each sensor to achieve equal pressure.
3. Push “ZERO” button or “SHORT ZERO PIN” for 2 seconds to “COM PIN” before installation or when it is necessary.


 <b>Caution</b>	Reapply the pipe tape, thread sealant, or pipe compound before sensor installation.
---	---

**For units with LCD display:**

“ZERO” icon will be on when the push button is released. If auto zero is successful, “ZERO” icon will flash twice, otherwise “ERROR” and “OVR” icons will flash twice.

**Pressure Connections**

The WPR2 Series have 1/4"-18NPT male fittings.

 <b>Caution</b>	<p>The sensors are labeled “SENSOR HIGH” and “SENSOR LOW”; <b>MAKE SURE THE SENSORS ARE WIRED TO THE CORRESPONDING TERMINAL BLOCK INSIDE THE HOUSING.</b> Otherwise We will not guarantee the accuracy specifications.</p> <p><b>DO NOT REPLACE SENSORS WITH ANY OTHER SENSORS. THE WPR2 UNITS ARE CALIBRATED WITH THE HIGH AND LOW SENSORS SUPPLIED WITH THE UNIT.</b></p>
---	---

**WPR2-300** units can handle a proof pressure of 600 psi for both HIGH and LOW pressure sensors. All other **WPR2** units can handle a proof pressure of **3X THE MAXIMUM LINE PRESSURE** for both HIGH and LOW pressure sensors. If after connecting the pipe, the unit outputs out-of-range signal **OVR** on display only turn off the unit, disconnect the pipe or shut down the valves immediately and check the pressure input with a gauge or other test instrument.

A Pressure Snubber\* is included with each sensor to dampen pressure surges. A pigtail siphon should be used to lower the media temperature below 257°F (125°C) to prevent damage to the pressure sensor.

\***WPR2-300** Pressure Snubbers are optional.

**Input Range Adjustment**

- Do not switch pressure range and output mode when power is on. Make sure power to the unit is off. Failure to do so will not allow any new switch settings to take place.
- Choose differential range based on the expected differential pressure in your application. Move switches to the correct positions and then power on the transmitter.
- Maximum line pressure

Configuration	Maximum Line Pressure
WPR2-30	30 PSI
WPR2-100	100 PSI
WPR2-300	300 PSI
HH/WPR2-300	600 PSI

The WPR2 can operate in either unidirectional mode (0 – X PSI) or bidirectional mode (± X PSI). The unit will set at unidirectional mode after factory calibration.

**Unidirectional Mode**

- DIP switch SW7 position 1 set at **UNI** side.
- DIP switch SW7 positions 4 and 5 are for Range Selection

<b>WPR2-30</b>	<b>0 to 30 PSI</b>	<b>0 to 15 PSI</b>	<b>0 to 7.5 PSI</b>	<b>0 to 3 PSI</b>
	1 <input type="checkbox"/> 2	1 <input type="checkbox"/> 2	1 <input type="checkbox"/> 2	1 <input type="checkbox"/> 2
	A <input type="checkbox"/> B	A <input type="checkbox"/> B	A <input type="checkbox"/> B	A <input type="checkbox"/> B
<b>WPR2-100</b>	<b>0 to 100 PSI</b>	<b>0 to 50 PSI</b>	<b>0 to 25 PSI</b>	<b>0 to 10 PSI</b>
	1 <input type="checkbox"/> 2	1 <input type="checkbox"/> 2	1 <input type="checkbox"/> 2	1 <input type="checkbox"/> 2
	A <input type="checkbox"/> B	A <input type="checkbox"/> B	A <input type="checkbox"/> B	A <input type="checkbox"/> B
<b>WPR2-300</b>	<b>0 to 300 PSI</b>	<b>0 to 150 PSI</b>	<b>0 to 75 PSI</b>	<b>0 to 30 PSI</b>
	1 <input type="checkbox"/> 2	1 <input type="checkbox"/> 2	1 <input type="checkbox"/> 2	1 <input type="checkbox"/> 2
	A <input type="checkbox"/> B	A <input type="checkbox"/> B	A <input type="checkbox"/> B	A <input type="checkbox"/> B


**Bidirectional Mode**

- DIP switch SW7 position 1 set at **BI** side.
- DIP switch SW7 positions 4 and 5 are for Range Selection

**NOTE** In Bidirectional mode, a value of 0 PSID will have an output equal to 50% of the full output range (12mA, 2.5V, 5V).



<b>WPR2-30</b>	<b>-30 to +30 PSI</b>	<b>-15 to +15 PSI</b>	<b>-7.5 to +7.5 PSI</b>	<b>-3 to +3 PSI</b>
	1 5 2 A 4 B BAR 3 PSI 5V 2 10V BI 1 ON ← UNI	1 5 2 A 4 B BAR 3 PSI 5V 2 10V BI 1 ON ← UNI	1 5 2 A 4 B BAR 3 PSI 5V 2 10V BI 1 ON ← UNI	1 5 2 A 4 B BAR 3 PSI 5V 2 10V BI 1 ON ← UNI
<b>WPR2-100</b>	<b>-100 to +100 PSI</b>	<b>-50 to +50 PSI</b>	<b>-25 to +25 PSI</b>	<b>-10 to +10 PSI</b>
	1 5 2 A 4 B BAR 3 PSI 5V 2 10V BI 1 ON ← UNI	1 5 2 A 4 B BAR 3 PSI 5V 2 10V BI 1 ON ← UNI	1 5 2 A 4 B BAR 3 PSI 5V 2 10V BI 1 ON ← UNI	1 5 2 A 4 B BAR 3 PSI 5V 2 10V BI 1 ON ← UNI
<b>WPR2-300</b>	<b>-300 to +300 PSI</b>	<b>-150 to +150 PSI</b>	<b>-75 to +75 PSI</b>	<b>-30 to +30 PSI</b>
	1 5 2 A 4 B BAR 3 PSI 5V 2 10V BI 1 ON ← UNI	1 5 2 A 4 B BAR 3 PSI 5V 2 10V BI 1 ON ← UNI	1 5 2 A 4 B BAR 3 PSI 5V 2 10V BI 1 ON ← UNI	1 5 2 A 4 B BAR 3 PSI 5V 2 10V BI 1 ON ← UNI

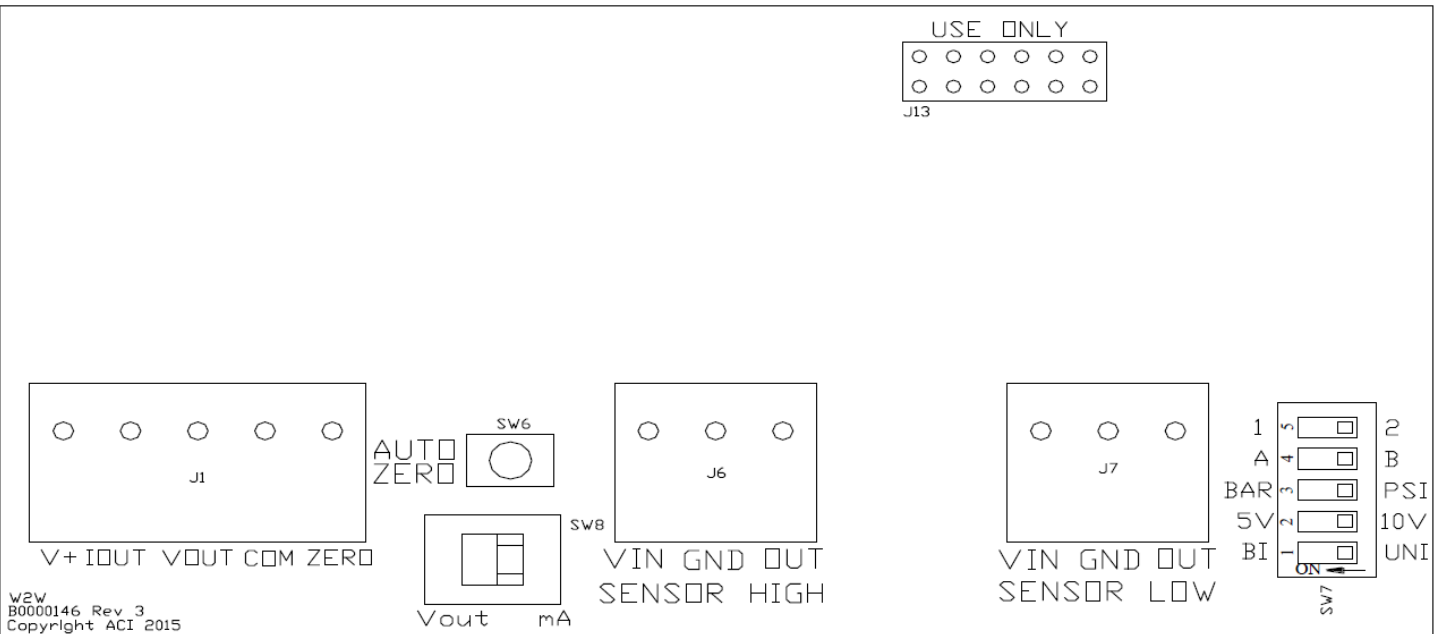

**Engineering Units Adjustment**

This option is ONLY for units with LCD display. Switch DIP switch SW7 position 3 to select PSI or BAR.

**Advanced Features**

For units with LCD display:

**LCD Engineering Units Adjustment**




Switch DIP switch SW3 position three to select BAR or PSI. If switched with power on, unit change will not take place until power is cycled.

- **ERROR** icon will be on when differential pressure is out of range.
- **OVR** icon will be on when gage pressure is out of range on either the high or low port.

**Troubleshooting**

Problem	Trouble Shooting Steps
<p>“ERROR” icon on Display will be on when differential pressure is out of range. The differential pressure could be lower or higher than the selected range.</p> <p>“OVR” icon on Display will be on when the input pressure is &gt; than Max Line Pressure. Check pressure input with a gauge or other test instrument. The WPR2-300 Series is available for pressures over 100 PSI.</p>	<ol style="list-style-type: none"> <li>1. Verify the HIGH Sensor Voltage is between 0.5 VDC (0 PSI) and 4.5 VDC (Max. Line Pressure) When measuring from the HIGH Sensor terminal Block “GND” to “OUT”. If out of range call technical support.</li> <li>2. Verify the LOW Sensor Voltage is between 0.5 VDC (0 PSI) and 4.5 VDC (Max. Line Pressure) When measuring from the LOW Sensor terminal Block “GND” to “OUT”. If out of range call technical support.</li> <li>3. Verify in Uni-Directional Mode that the HIGH Sensor Voltage is ≥ the LOW Sensor Voltage. If voltage is anything different call technical support.</li> </ol>
Output reading @ 4mA or 0 VDC ll the time	<ol style="list-style-type: none"> <li>1. Verify proper Supply Voltage at the transducer meets the Product Specifications.</li> <li>2. Verify 5 VDC Reference voltage across “VIN” to “GND” terminals for both the HIGH &amp; LOW Sensor terminal blocks. If voltage is anything different than 5VDC call technical support.</li> </ol>
Erroneous Readings	<ol style="list-style-type: none"> <li>1. Bleed Air from System.</li> <li>2. Repeat the Auto Zero calibration on page 2.</li> </ol>
Output signal reads half with no pressure applied. i.e.: 5V output on a 0-10V selection.	Verify SW7 #1 is set to UNI. Cycle power to confirm the change.

**Appendix – Symbols Key**

 <b>Warning</b>	Potential for death, serious injury, or permanent damage to a system.
 <b>Caution</b>	Potential for injury, damage to a system, or system failure.
 <b>Tip</b>	Useful information not related to injury or system damage.